

## REMOTE DURESS ALARM INSTRUCTIONS

Please follow these simple instructions for the operation of your Remote Duress Alarm.

---

Your vehicle may be fitted with a remote duress alarm, similar to the one pictured below. Please see the instructions below on how to operate your duress alarm.



### TO SEND A DURESS ALERT

This device is designed to operate 400m from the vehicle. Outside that range, successful operation cannot be ensured.

Press and hold red button for at least one second.

### WATER EXPOSURE

These pendants are NOT waterproof

Please take care of your device to ensure it is functioning at all times.

### BATTERY

Battery life is approximately 2 years and uses LR23A batteries

Receiver uses 12 or 24 volt power from vehicle.

**THIS DEVICE REQUIRES PROFESSIONAL INSTALLATION PERFORMED BY A FLEET COMPLETE ACCREDITED INSTALLER.**